


124982, KIT WASTE PUMP OUT

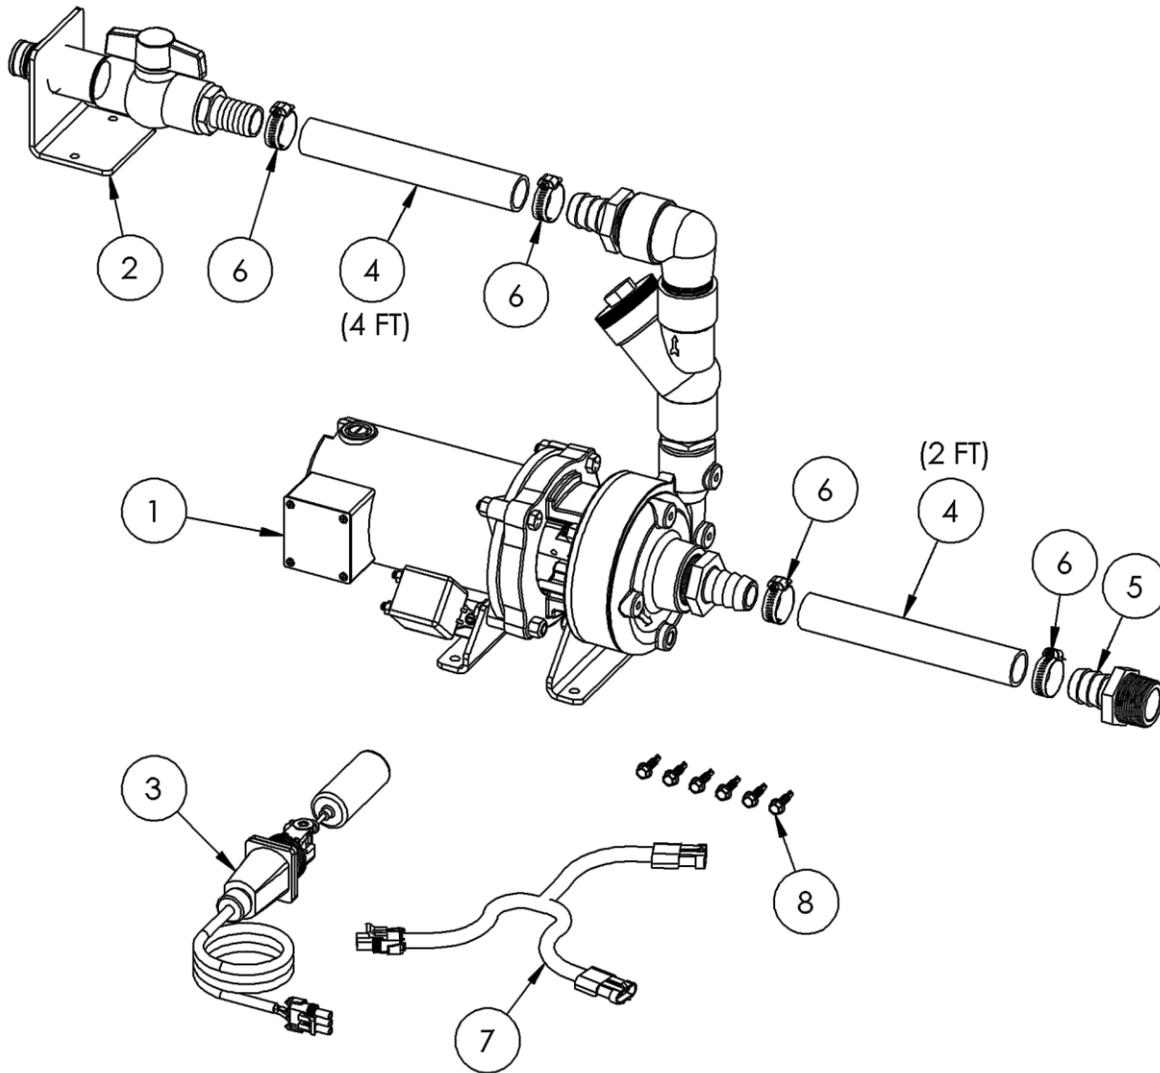


6	8	124985	SCREW,1/4 X 1 HWH TEKS 3
1	7	107155	HARNESS, WASTE PUMP OUT
4	6	102857	CLAMP, HOSE #20 SS
1	5	125861	FITG, BARB 1-1/4 P X 1 H PVC
6 FT	4	106035	HOSE, WTR 1 IN HRZ 100 FT BULK
1	3	105753	ASSY, LEVEL SENSOR SHUTOFF WASTE
1	2	124883	ASSY, VALVE BRACKET
1	1	124889	ASSY, PUMP OUT
QTY	ITEM	PART NO.	DESCRIPTION

WASTE PUMP INSTALLATION DOCUMENT: PART NUMBER 125097

MUST HAVE GROUP 24 BATTERY INSTALLED TO USE PUMP


124889, ASSEMBLY, PUMP OUT

124979, HARNESS, PUMP OUT (PRE-WIRED BATTERY WIRES, HARNESS PIGTAIL AND RELAY JUMPER) NOT SHOWN

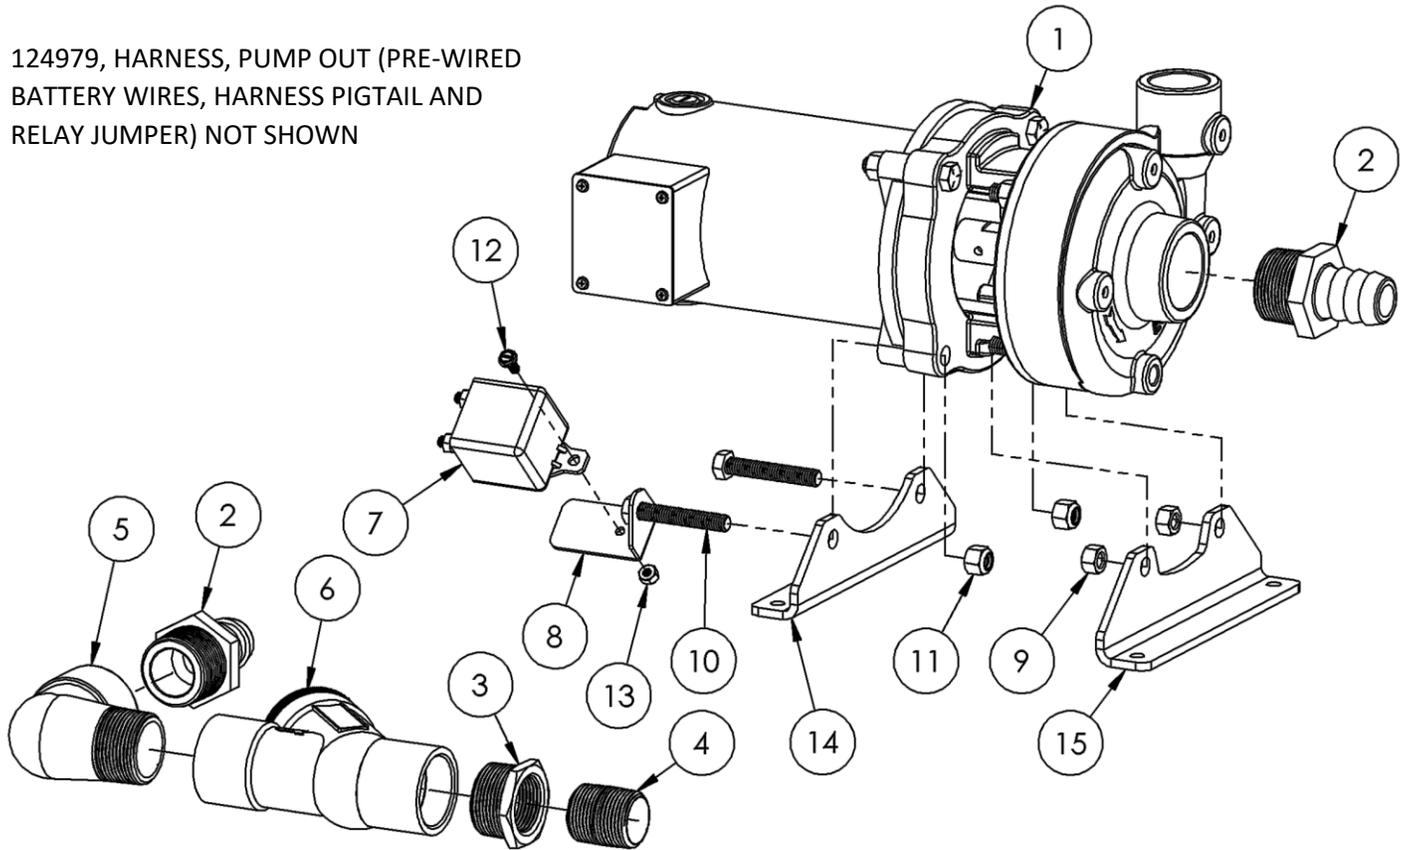

1	15	125979	PNL, PUMP MOUNT FRONT SUPPORT
1	14	125980	PNL, PUMP MOUNT REAR SUPPORT
1	13	109662	NUT, 10-32 NYLOK SS
1	12	123600	SCREW, MACH 10-32 X 1/2 HSWH ZP
2	11	109391	NUT, 3/8-16 NYLOK SS
2	10	125850	BOLT, TAP 3/8-16 X 2-1/4 HXHD SS
6	9	125067	NUT, 3/8-16 ZP
1	8	124980	PNL, RELAY BRACKET
1	7	124981	RELAY, 12V 200A
1	6	125677	CHECK VALVE, BALL 1-1/4 NPT PVC
1	5	125862	ELL, STREET 1-1/4 NPT POLY
1	4	125458	NIPPLE, 1.0 NPT CLOSE BRASS
1	3	125457	BUSHING, 1.25 NPT X 1 FNPT BRASS
2	2	125861	FTG, BARB 1-1/4 P X 1 H PVC
1	1	124894	PUMP, 12V DC CENTRIFUGAL
QTY	ITEM	PART NO.	DESCRIPTION

124883 VALVE BRACKET ASSEMBLY

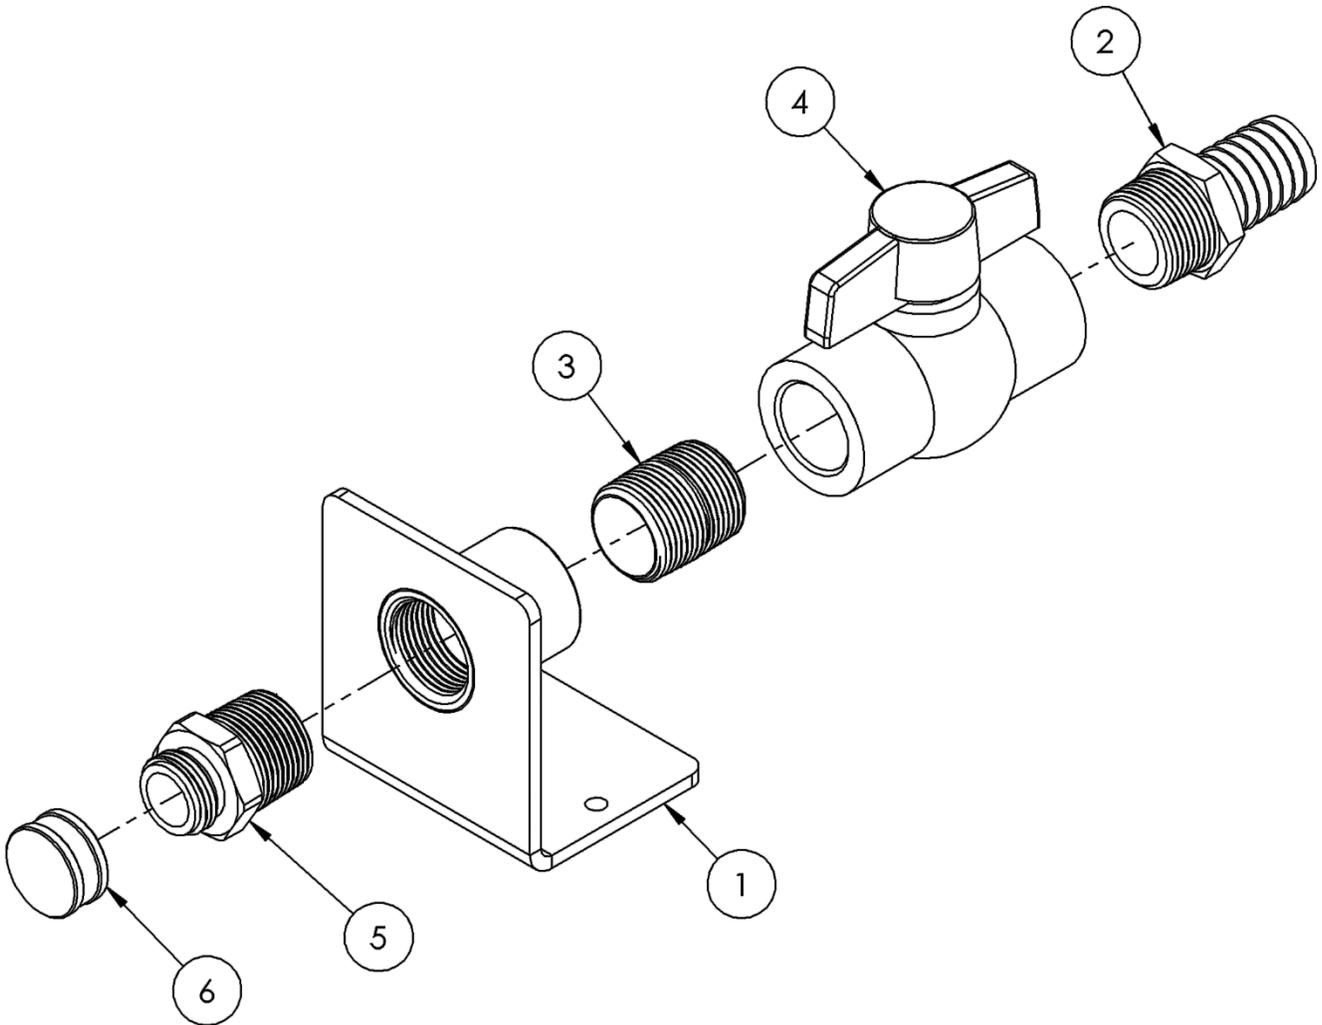

1	6	102527	CAP, GARDEN HOSE 3/4 BRASS
1	5	124987	FTG, GRDN HOSE 1 NPT X 3/4 H BRASS
1	4	124888	VALVE, BALL 1.0 FNPT PVC
1	3	125458	NIPPLE, 1.0 NPT CLOSE BRASS
1	2	121755	FTG, BARB 1 P X 1 H BRASS
1	1	124884	WMT, VALVE BRACKET
QTY	ITEM	PART NO.	DESCRIPTION